



INSTALLATION INSTRUCTIONS

NOT recommended to install on copper drains.


www.zeroflush.com

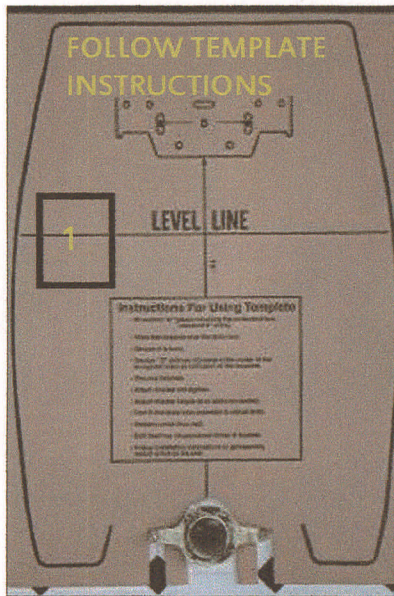


Place Template Over Drain

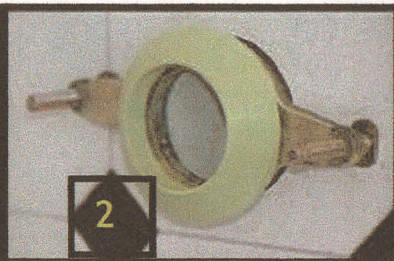

Place rubber gasket

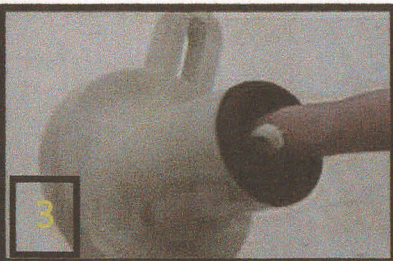


Lubricate coupler male side

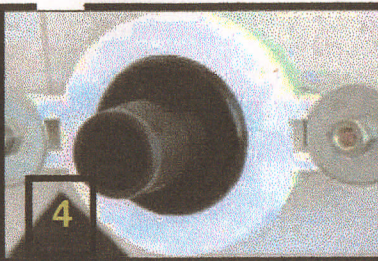


Insert drain tube thru coupler front side. Install coupler on flange

Before installing the urinal, make sure drain line is clean and clear of debris.

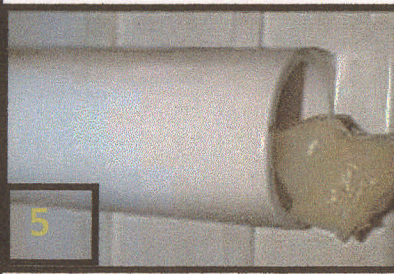

Lubricate Housing drain

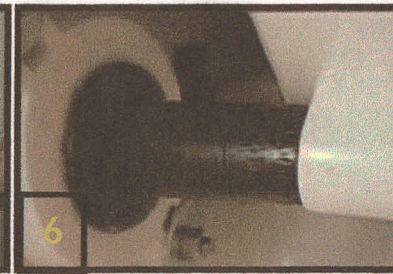


With urinal on wall. Test Fit proper alignment.




Replacing the Urinal?

Shut off and cap water supply. Remove existing hardware, caulk and grout. Remove all traps and conventional siphons. **ENSURE PROPER DRAIN PITCH.**

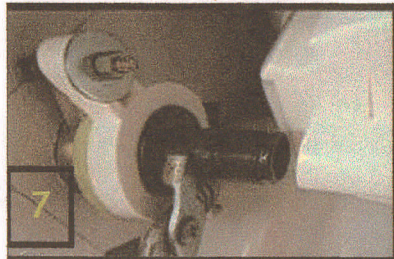


PULL drain forward with channel lock pliers into housing drain until it meets internal stop

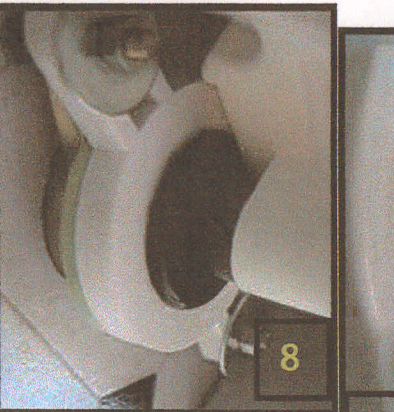

Drain pipe should go in until it meets stop.



Remove Insert and run water thru system. Check for leaks.

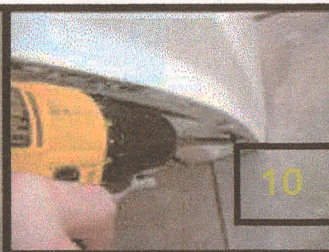


Anchor bottom to wall




NEW CONSTRUCTION
Drain Must Have Standard Urinal Flange
NOT SUPPLIED.

ZeroFlush, Inc.
3008-3016 Lions Court
Kissimmee FL. 34744


407 935 1180 Tel.
407 935 1103 Fax

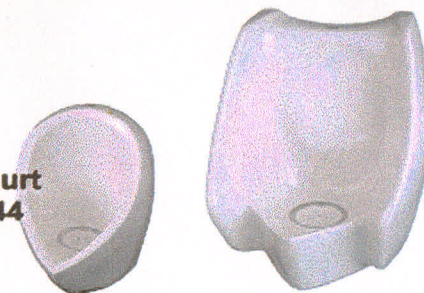

First Time Set-Up Instructions

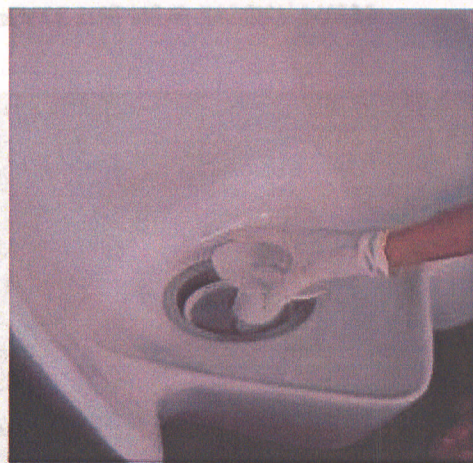

Take a new Drain Insert and place it in the waste trap.

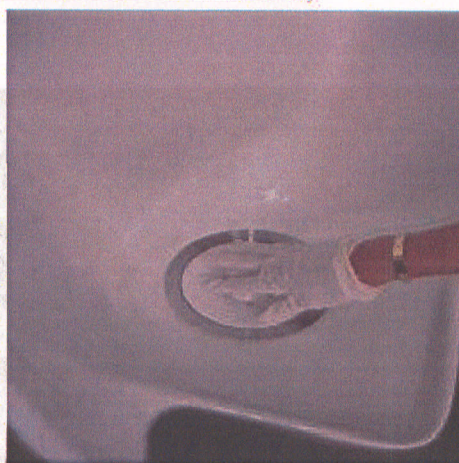

Press down on the drain insert until you feel and hear a slight popping sound. The insert must be tight.



Pour about 30 oz. of water over the Drain Insert. Then slowly pour the *entire contents of the Odor Barrier* onto the Drain Insert. Wipe clean. The ZeroFlush Urinal is now ready for use.

Daily Cleaning Instructions



Remove debris.



Spray and wipe down




Wipe clean.

Insert Replacement

ZeroFlush
3008-3016 Lions Court
Kissimmee, FL. 34744
Tel. (407) 935-1180

After approximately 15,000 uses, there will be a small amount of blue Odor Barrier Liquid on top of the Drain Insert. This indicates it is time to change out the Odor Barrier Liquid and the Drain Insert.

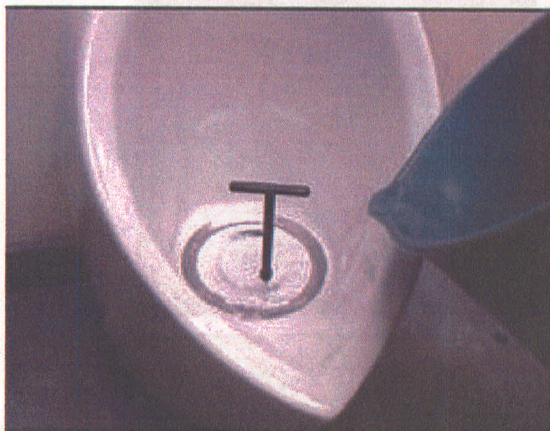

USING THE KEY PROVIDED, SCREW THE KEY INTO THE KEY HOLE OF THE DRAIN INSERT AND FILL WITH WATER



PULL UPWARD ON INSERT TO REMOVE.




RINSE THE OPEN TRAP WITH WATER.



REPLACE THE NEW INSERT, PRESS DOWN UNTIL YOU FEEL AND HEAR A SLIGHT POPPING SOUND



FILL WITH 32 OUNCES OF WATER

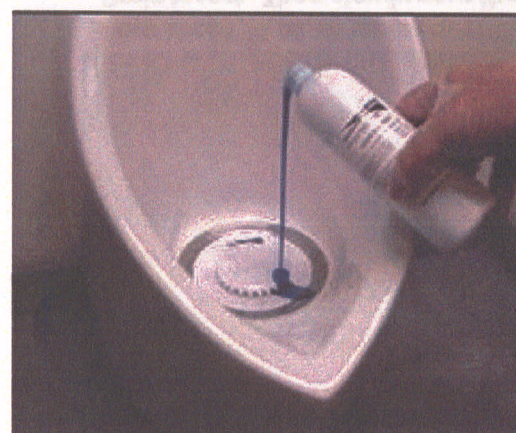

POUR IN 1 – 10 OUNCE BOTTLE OF ODOR BARRIER LIQUID